



Electrically Isolated USB EZO™ Carrier Board

Power consumption


5V 31mA

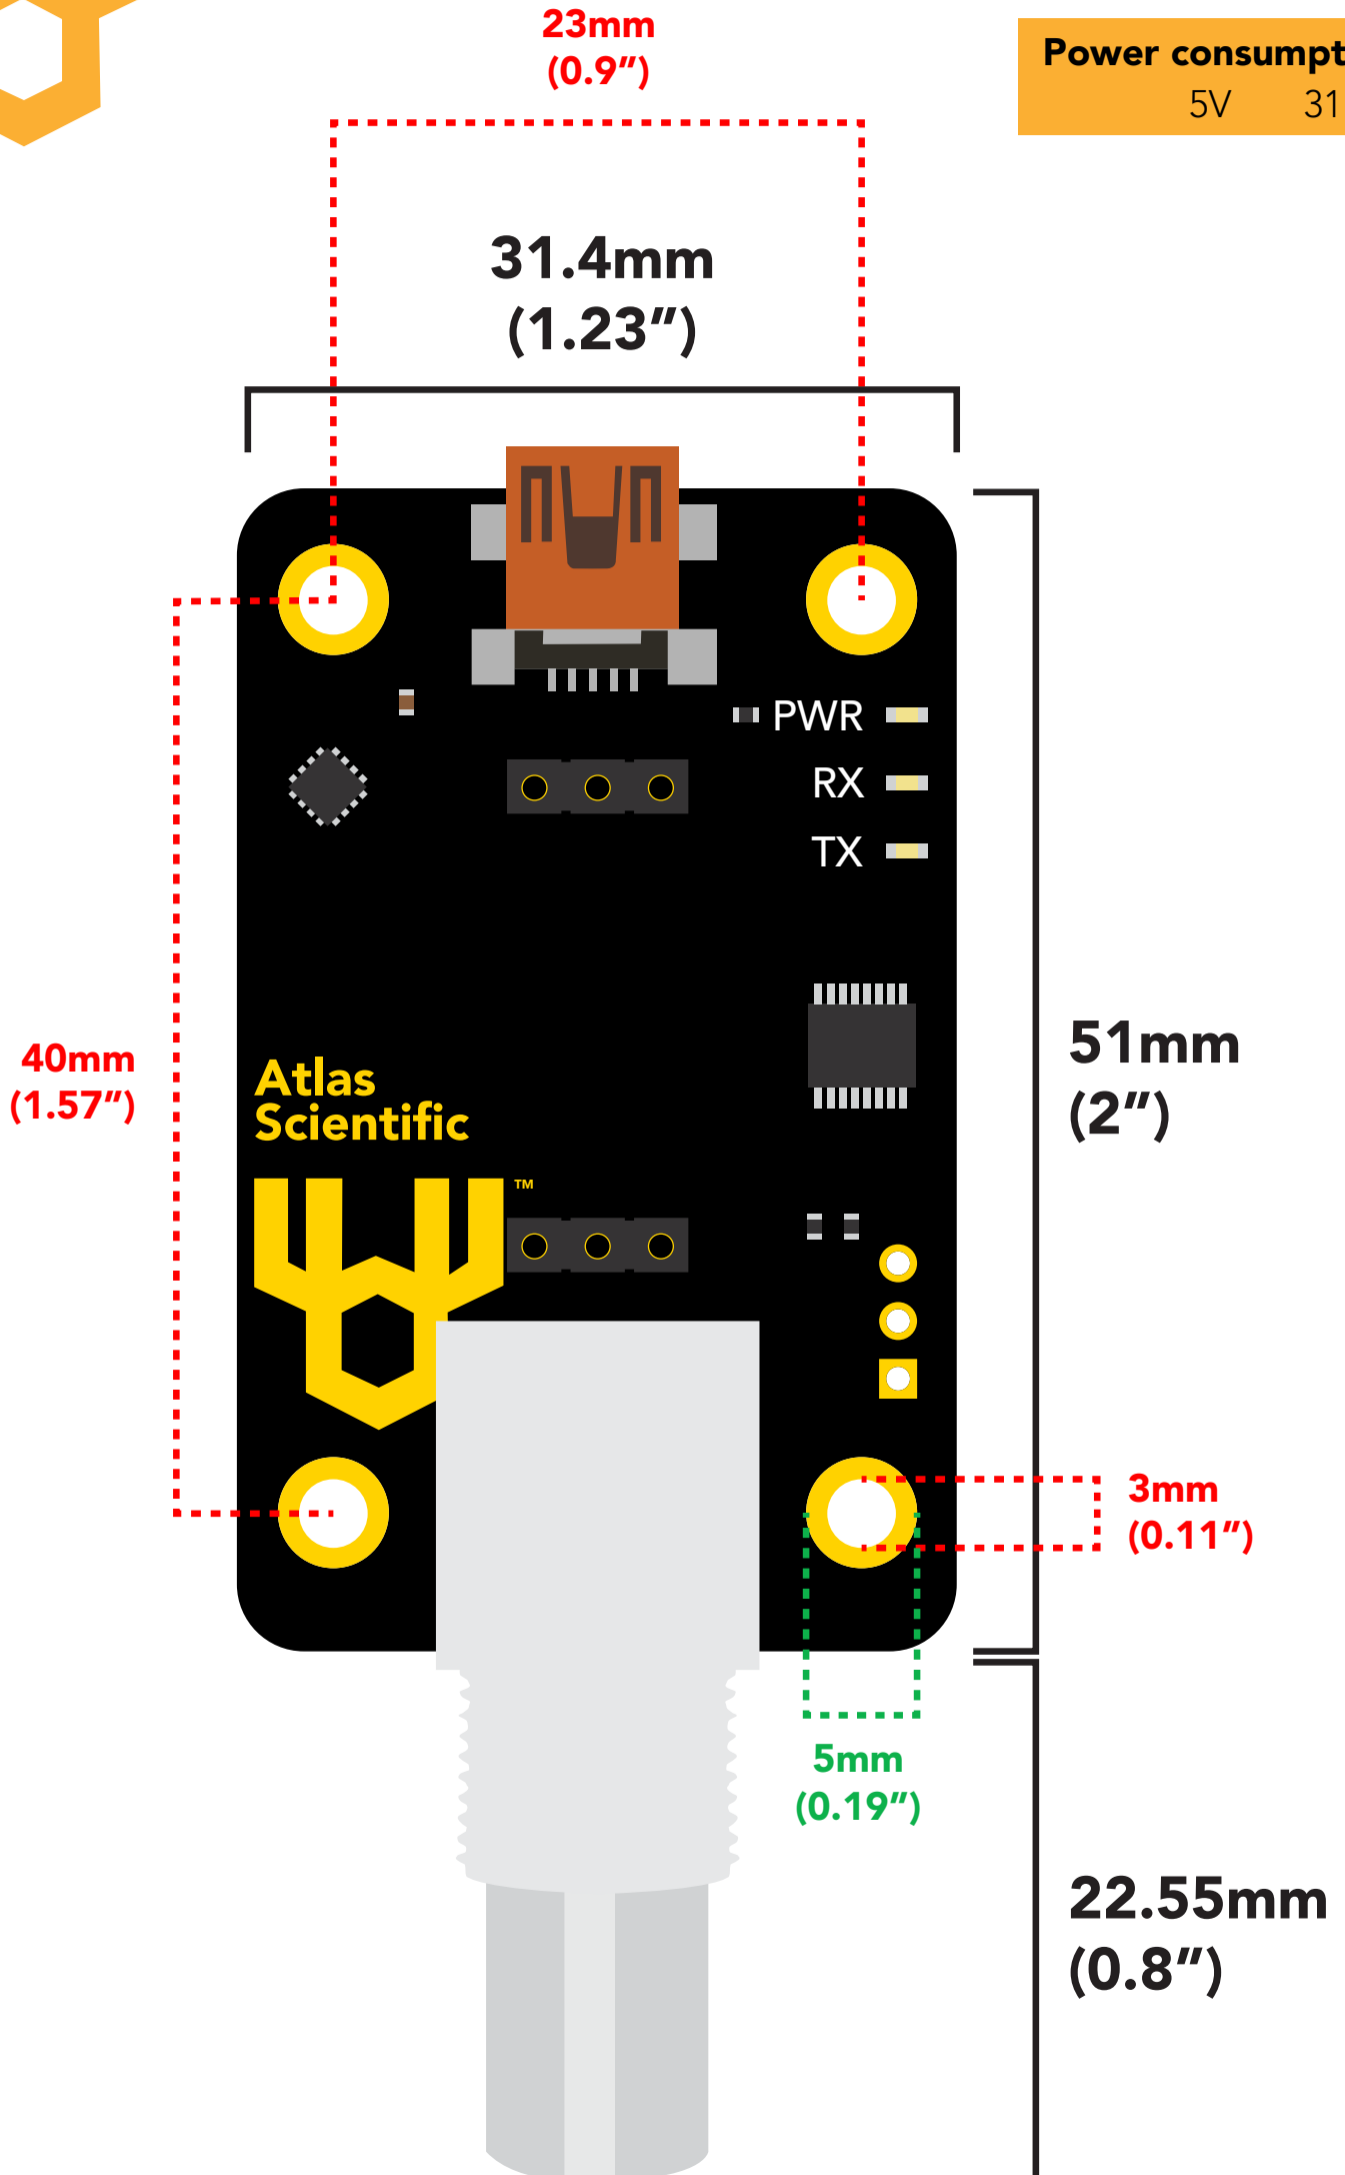



Electrically Isolated USB EZO™ Carrier Board

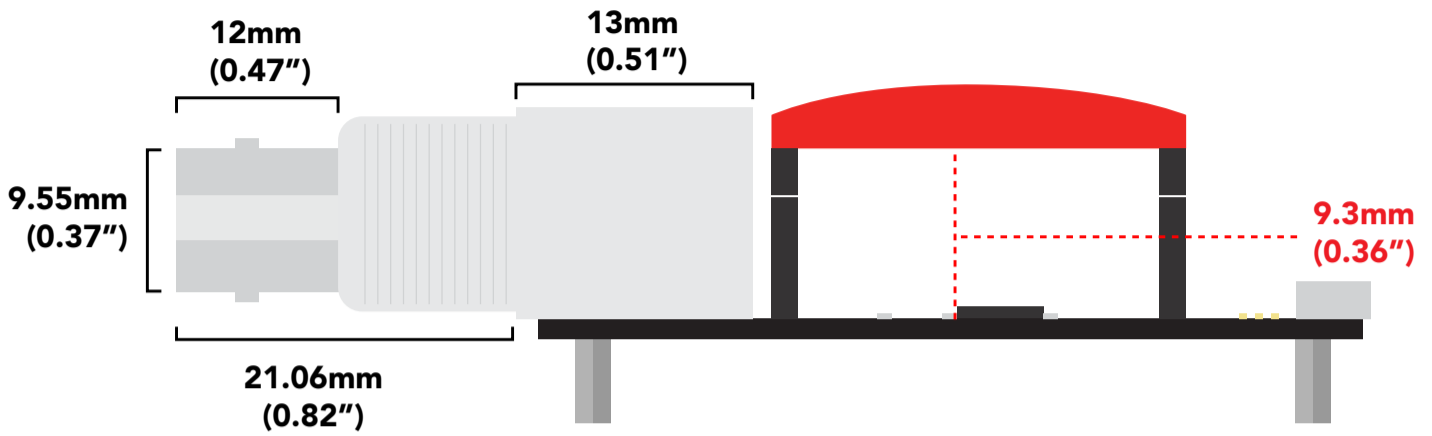


Standoff

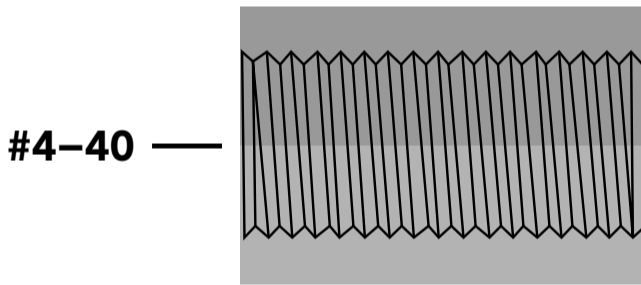


Screw

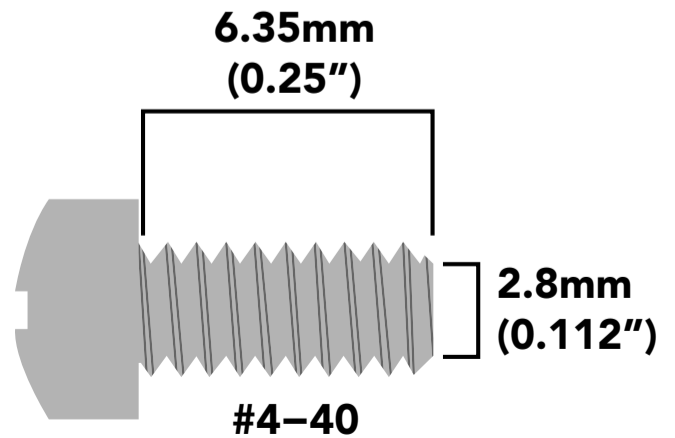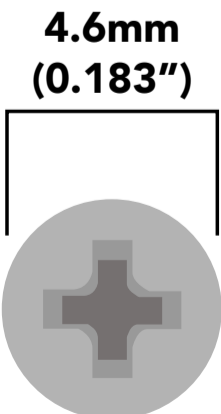


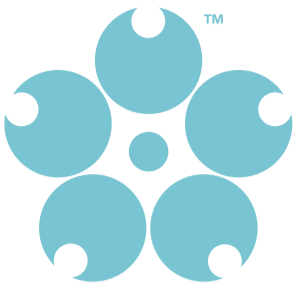

Proper setup for use with the EZO™ Universal Flow Meter Totalizer

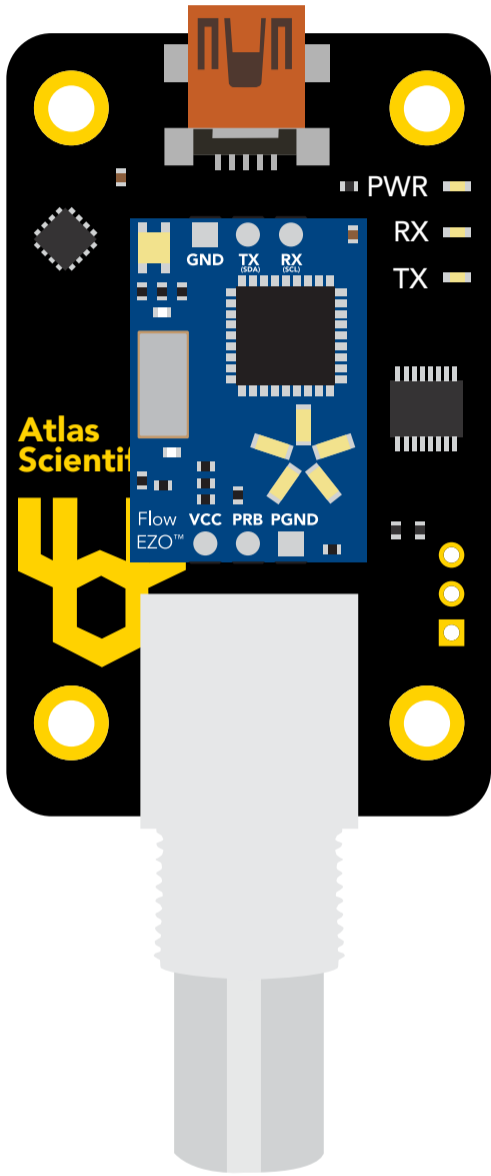


Connect Flow breakout board
to the carrier board.

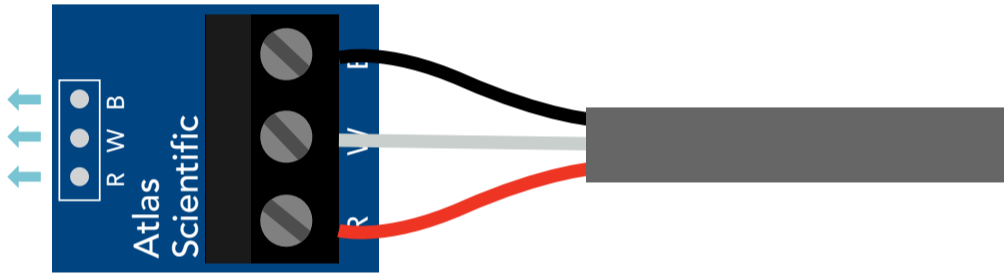

The Electrically Isolated USB EZO™ Carrier Board works with all EZO™ class devices.

The Electrically Isolated USB EZO™ Carrier Board does not come with EZO™ class devices.

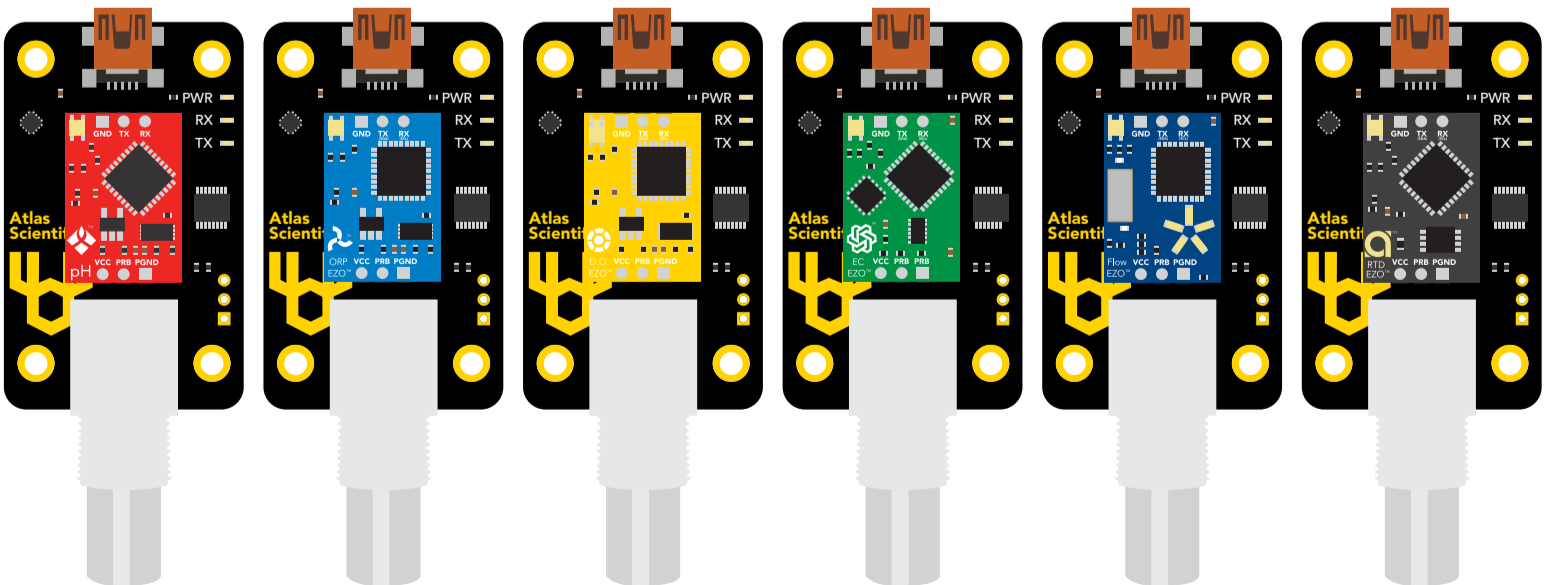

Electrically Isolated USB EZO™ Carrier Board

This schematic shows exactly how we isolate data and power using the [ADM3260](#) and a few passive components. The ADM3260 can output isolated power up to 150 mW and incorporates two bidirectional data channels.

This technology works by using tiny transformers to induce the voltage across an air gap. PCB layout requires special attention for EMI/EMC and RF Control, having proper ground planes and keeping the capacitors as close to the chip as possible are crucial for proper performance. The two data channels have 4.7kΩ pull up resistor on both the isolated and non-isolated lines (R1, R2, R3, and R4) The output voltage is set using a voltage divider (R5, R6, and R,7) this produces a voltage of 3.7V regardless of your input voltage.

Isolated ground is different from non-isolated ground, these two lines should not be connected together.

